

 
ROOMIE 

high power, long lasting

CORDLESS VACUUM CLEANER

2200 mAh Li-ion Battery
2-in-1 Upright & Handheld Design


VINCENT

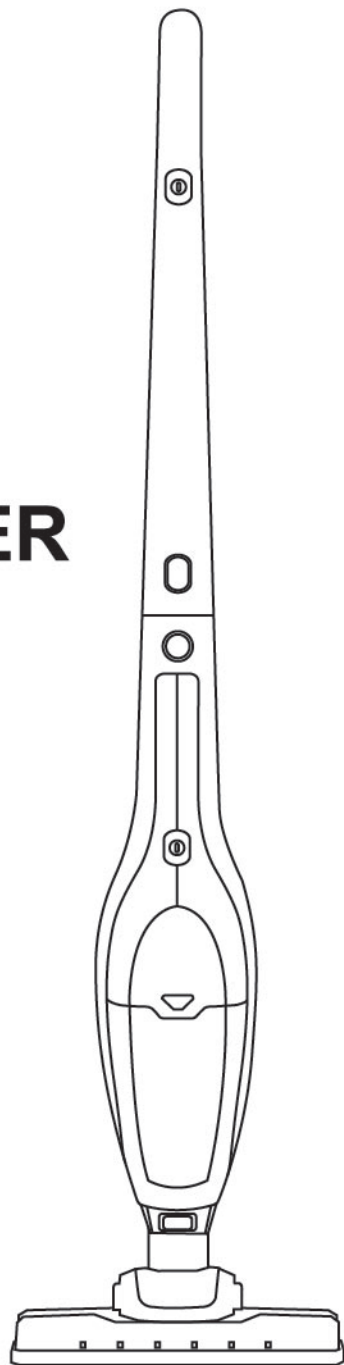

(SHOP ONLINE)

#roomie_vincent



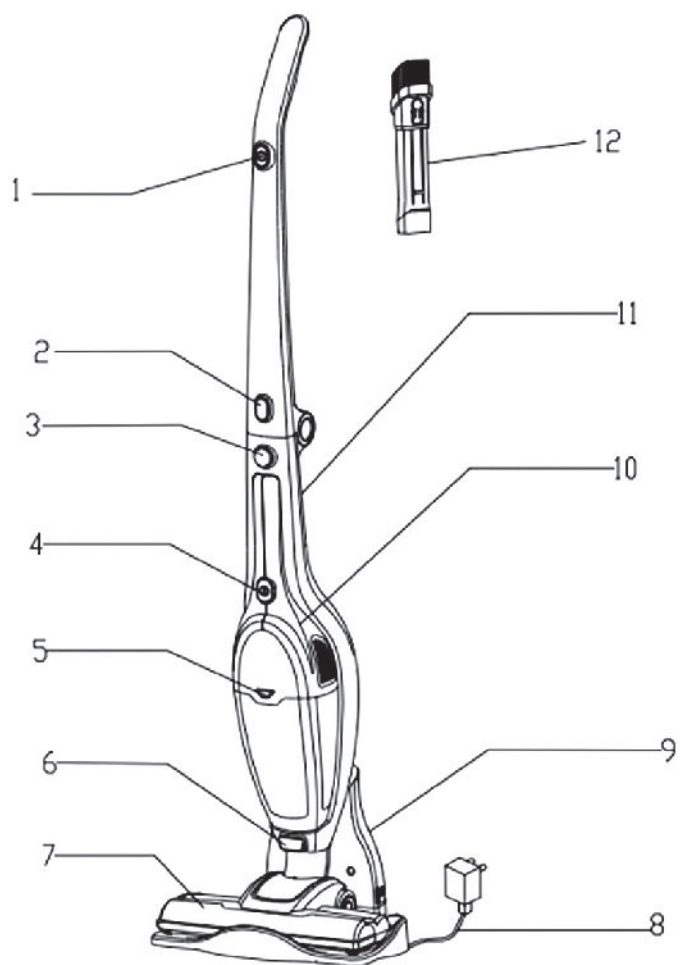 

DESCRIPTION

- | | |
|-----------------------------------|---------------------------------|
| 1. Upright Power Button | 7. Turbo Floor Brush |
| 2. Upright Folding Button | 8. Power Cord |
| 3. Handheld Vacuum Release Button | 9. Upright Charging Base |
| 4. Handheld Vacuum Power Button | 10. Handheld Vacuum |
| 5. Dust Cup Release Button | 11. Upright Body Frame |
| 6. Floor Brush Release Button | 12. Multi-Function Crevice Tool |

WARNING

PLEASE READ THE INSTRUCTIONS CAREFULLY PRIOR TO USING THE PRODUCT.
STORE THESE IN A SAFE PLACE FOR FUTURE REFERENCE.

SAFETY INSTRUCTIONS

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. The cord of the adaptor cannot be replaced; if the cord is damaged, the adaptor shall be scrapped.

Plug must be removed from socket-outlet before cleaning or maintaining the appliance.

This device can only be used with the adapter model supplied with the device.

IMPORTANT WARNINGS

Prior to plugging in the product, check that your mains voltage is the same as the one indicated on the product label.

The main connection cable must not be tangled or wrapped around the product during use.

Do not pull on the connection cord in order to unplug it.

Do not use, connect or disconnect the device to the mains with your hands or feet wet.

Proceed according to the conservation and cleaning section of this manual for cleaning.

Unplug the product immediately from the mains in the event of any breakdown or damage and contact an authorised Technical support service.

In order to prevent any risk of danger, do not open the device. Only qualified technical personnel from the brand's Official Technical support service may carry out repairs or procedures on the device.

Any incorrect use or improper handling of the product shall render the warranty null and void. Only an authorised technical support service centre may carry out repairs on this product.

This appliance is designed exclusively for domestic use, in no case should be a commercial or industrial use. In case of misuse or tampering with the product, it will be out of warranty.

Do not use the appliance to vacuum liquids (water, etc), sharp objects (pins, pins, nails, glass, etc), incandescent objects (matches, cigarettes)

Never use the turbo brush to: polish floors, suck (Liquids, wet or damp dust, hot ash, burning objects, such as cigarettes, matches, sharp and hard items, such as: razors, pins, thumbtacks, pieces of glass, etc), flour, cement, plaster, printer or photocopier toner, etc.

ROOMIE TEC disclaims all liability for damages that may occur to people, animals or objects, for the non-observance of these warnings.

BEFORE FIRST USE

1. Remove the main body of the appliance and other parts/accessories from the packaging.
2. Unfold the main body to have the handle uprightly fixed.
3. Insert the floor brush into the bottom of the main body. Make sure they are fastened firmly.
To remove the floor brush from the main body, press the floor brush lock/release button and pull it out.
4. There is a lock on bottom of floor brush to fix the brush. Make sure it's locked in place for use.

DEVICE CHARGE

A full charge will take approximately 4,5 hours.

1. Attach the charging support piece to the charging base.
2. Hang the appliance onto the vacuum body hook of the charging base. Make sure the appliance fits steadily on the base.
3. Plug the charger into the charging base first, and then into the mains socket.
4. Charge the batteries at room temperature between 4 and 40 °C.
5. While charging, the pilot light will be flashing to indicate the charger is under working. When the charging operation is finished, the charger will switch off automatically and the pilot lights will be on instead of flashing.
6. Do not use the appliance while it is connected to the charger. Store the charger in a safe place for future charges.

INSTRUCTIONS FOR USE

1. To switch the appliance on, press the on/off button on the handle. Both the LED lights on the suction head and the pilot lights on the handheld vacuum cleaner will light on.
2. You can choose the suction power by pressing the power button once (ECO mode) or twice (High Efficiency mode) on the handle.
3. Turbo brush and LED lights on the suction head will be working or stop working at the same time controlled by the on/off button on the handle. Use the brush to clean the carpet or floor.
4. You can also push up the bending/upright lock on the handle to fold the appliance for easy storage in closets and other similar places.

TO USE THE HANDHELD VACUUM CLEANER SEPARATELY

1. Press the release button to uncouple the handheld vacuum cleaner from the main body.
2. Take off the 2-in-1 corner nozzle from the back of charging base.
3. Install the nozzle to clean corners and the upholsteries, such as sofa.
4. Press the center of on/off button for handheld vacuum cleaner to make the machine work, and switch between ECO mode and High Efficiency mode.
5. Put the handheld vacuum cleaner back into its place on the main body after use.

MAINTENANCE AND CLEANING

- Switch off the appliance and let it cool before undertaking any cleaning task.
- Clean the outside of the appliance with a damp cloth. Do not use abrasive products or solvents.
- Do not submerge the appliance in water or any other liquid. Make sure that no water enters the appliance.
- Remove any dirt (hair and other fibers) tangled around the brush and wheels.

CLEANING DUST CONTAINER AND FILTER

1. Uncouple the handheld vacuum cleaner. Dismantle it by pressing the release button for dust container.
2. Take out the Hepa filter and filter protector. Empty the dust container and filter.
3. If the parts are heavily soiled, wash the dust container, filter and its protector under running water with detergent. **Check that all the parts are completely dry before fitting them back.**

CLEANING BRUSH

1. Unlock the brush from the floor brush. Take it out and remove any dirt (hair and other fibers) tangled around the roller.
2. Wash the brush under running water with mild detergent. Make sure that it is completely dry before replacing it.

PRODUCT DISPOSAL



This product complies with European Directive 2012/19/EU on electrical and electronic devices, known as WEEE (Waste Electrical and Electronic Equipment), provides the legal framework applicable in the European Union for the disposal and reuse of waste electronic and electrical devices. Do not dispose of this product in the bin, instead going to the electrical and electronic waste collection centre closest to your home.




The product may contain batteries. Remove them before disposing of the product and dispose in special containers approved for this purpose.




TROUBLESHOOTING

MALFUNCTION	POSSIBLE REASONS	SOLUTIONS
MOTOR DOES NOT TURN ON	Battery is drained out The hand-held vacuum cleaner is not properly installed in the body assembly (because the body assembly requires a hand-held vacuum cleaner to provide power, which itself cannot work independently)	Charge the vacuum cleaner Correctly install the hand-held vacuum cleaner and body assembly
SUCTION REDUCED	Dust cup has been full of dust The Filter is full of dust Air duct of the turbo brush is blocked or roller brush stall The battery is low	Dump the dust in the dust cup Clean or replace the Filter Clean the garbage attached to the turbo brush Fully charge the battery as indicated in the charging section
CHARGING INDICATOR DOES NOT FLASH WHEN CHARGING	The hand-held vacuum cleaner is not fitted to the body assembly	Properly assemble the hand-held vacuum cleaner and the body assembly
THE USING TIME IS NOT ENOUGH AFTER CHARGING	The charging time is insufficient	Fully charge the battery as indicated in the charging section


DO NOT USE...

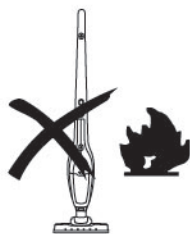

around fire

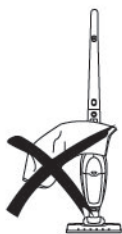

cover up the air outlet

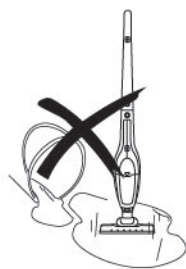


damp water



upside down



over-heated environment

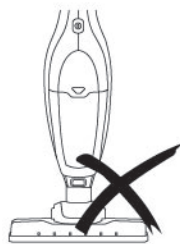

floor brush blocked



broken cable



sharp objects



burning cigarettes

WARRANTY

THANK YOU FOR YOUR PURCHASE.

RETURNS AND EXCHANGES

We provide all customers a **30 Day Money Back Guarantee**, effective from the day you purchase/receive the product.

To qualify for the return, the product must remain in mint condition and all functions are working normally. We cannot accept products that are broken or non-functional caused by human factors.

Please also make sure that all parts and accessories, and packing materials are included in the return package.

We also provide all customers a **one year factory warranty**, effective from the day you purchase/receive the product. Under our factory warranty, we will replace your product for a new one in cases of product malfunction, failure, or any other quality issues.

For all returns and exchanges, please make sure to provide us the serial number which can be found on the product labels.

ADDITIONAL WARRANTY

We are happy to extend your original warranty for **another year**, **FREE OF CHARGE** for customers that are communicating with us on social network.

Please scan the QR code below or search **Roomie_Tec** to reach us:

